

## 接触器

施耐德		Honeywell		备注
		1NO	1NC	
LC1D	09B7C	HCS-09-10-A24	HCS-09-01-A24	施耐德为1NO+1NC触点， Honeywell为1NO或1NC触头， 如果需要1个以上触头，可加配 HAS-11模组
	09E7C	HCS-09-10-A48	HCS-09-01-A48	
	09F7C	HCS-09-10-A110	HCS-09-01-A110	
	09M7C	HCS-09-10-A220	HCS-09-01-A220	
	09Q7C	HCS-09-10-A380	HCS-09-01-A380	
	12B7C	HCS-12-10-A24	HCS-12-01-A24	
	12E7C	HCS-12-10-A48	HCS-12-01-A48	
	12F7C	HCS-12-10-A110	HCS-12-01-A110	
	12M7C	HCS-12-10-A220	HCS-12-01-A220	
	12Q7C	HCS-12-10-A380	HCS-12-01-A380	
	18B7C	HCS-18-10-A24	HCS-18-01-A24	
	18E7C	HCS-18-10-A48	HCS-18-01-A48	
	18F7C	HCS-18-10-A110	HCS-18-01-A110	
	18M7C	HCS-18-10-A220	HCS-18-01-A220	
	18Q7C	HCS-18-10-A380	HCS-18-01-A380	
	25B7C	HCS-25-10-A24	HCS-25-01-A24	
	25E7C	HCS-25-10-A48	HCS-25-01-A48	
	25F7C	HCS-25-10-A110	HCS-25-01-A110	
	25M7C	HCS-25-10-A220	HCS-25-01-A220	
	25Q7C	HCS-25-10-A380	HCS-25-01-A380	
	32B7C	HCS-32-10-A24	HCS-32-01-A24	
	32E7C	HCS-32-10-A48	HCS-32-01-A48	
	32F7C	HCS-32-10-A110	HCS-32-01-A110	
	32M7C	HCS-32-10-A220	HCS-32-01-A220	
	32Q7C	HCS-32-10-A380	HCS-32-01-A380	
	32B7C	HCS-32-10-A24	HCS-32-01-A24	
	32E7C	HCS-32-10-A48	HCS-32-01-A48	
	32F7C	HCS-32-10-A110	HCS-32-01-A110	
	32M7C	HCS-32-10-A220	HCS-32-01-A220	
	32Q7C	HCS-32-10-A380	HCS-32-01-A380	
	38B7C	HCS-40-A24		
	38E7C	HCS-40-A48		
	38F7C	HCS-40-A110		
	38M7C	HCS-40-A220		
	38Q7C	HCS-40-A380		
	40B7C	HCS-40-A24		
	40E7C	HCS-40-A48		
	40F7C	HCS-40-A110		
	40M7C	HCS-40-A220		
	40Q7C	HCS-40-A380		
	40AB7C	HCS-40-A24		
	40AE7C	HCS-40-A48		
	40AF7C	HCS-40-A110		
	40AM7C	HCS-40-A220		
	40AQ7C	HCS-40-A380		
	50B7C	HCS-50-A24		

	50E7C	HCS-50-A48
	50F7C	HCS-50-A110
	50M7C	HCS-50-A220
	50Q7C	HCS-50-A380
	50AB7C	HCS-50-A24
	50AE7C	HCS-50-A48
	50AF7C	HCS-50-A110
	50AM7C	HCS-50-A220
	50AQ7C	HCS-50-A380
	65B7C	HCS-65-A24
	65E7C	HCS-65-A48
	65F7C	HCS-65-A110
	65M7C	HCS-65-A220
	65Q7C	HCS-65-A380
	65AB7C	HCS-65-A24
	65AE7C	HCS-65-A48
	65AF7C	HCS-65-A110
	65AM7C	HCS-65-A220
	65AQ7C	HCS-65-A380
	80B7C	HCS-80-A24
	80E7C	HCS-80-A48
	80F7C	HCS-80-A110
	80M7C	HCS-80-A220
	80Q7C	HCS-80-A380
	95B7C	HCS-95-A24
	95E7C	HCS-95-A48
	95F7C	HCS-95-A110
	95M7C	HCS-95-A220
	95Q7C	HCS-95-A380

完全替换

**辅助触头模块**

施耐德		Honeywell
LADN11C	LAEN11N	HAS-11
LADN20C	LAEN20N	HAS-20
LADN02C	LAEN02N	HAS-02
LADN22C	LAEN22N	HAS-22
LADN40C	LAEN40N	HAS-40
LADN04C	LAEN04N	HAS-04
LADN13C	LAEN13N	HAS-13
LADN31C	LAEN31N	HAS-31

完全替换

西门子		Honeywell		备注
		1NO	1NC	
3TF	3000-0XB0	HCS-09-10-A24	HCS-09-01-A24	西门子无辅助触头, Honeywell为1NO或1NC触点
	3000-0XF0	HCS-09-10-A110	HCS-09-01-A110	
	3000-0XM0	HCS-09-10-A220	HCS-09-01-A220	
	3010-0XB0	HCS-09-10-A24		完全替换
	3010-0XF0	HCS-09-10-A110		
	3010-0XM0	HCS-09-10-A220		
	3001-0XB0		HCS-09-01-A24	
	3001-0XF0		HCS-09-01-A110	
	3001-0XM0		HCS-09-01-A220	
	3100-0XB0	HCS-12-10-A24	HCS-12-01-A24	西门子无辅助触头, Honeywell为1NO或1NC触点
	3100-0XF0	HCS-12-10-A110	HCS-12-01-A110	
	3100-0XM0	HCS-12-10-A220	HCS-12-01-A220	
	3110-0XB0	HCS-12-10-A24		完全替换
	3110-0XF0	HCS-12-10-A110		
	3110-0XM0	HCS-12-10-A220		
	3101-0XB0		HCS-12-01-A24	
	3101-0XF0		HCS-12-01-A110	
	3101-0XM0		HCS-12-01-A220	
	3200-0XB0	HCS-18-10-A24	HCS-18-01-A24	西门子无辅助触头, Honeywell为1NO或1NC触点
	3200-0XF0	HCS-18-10-A110	HCS-18-01-A110	
	3200-0XM0	HCS-18-10-A220	HCS-18-01-A220	
	3211-0XB0	HCS-18-10-A24	HCS-18-01-A24	西门子为1NO+1NC触点, Honeywell为1NO或1NC触点, 可添加HAS-11触点模块
	3211-0XF0	HCS-18-10-A110	HCS-18-01-A110	
	3211-0XM0	HCS-18-10-A220	HCS-18-01-A220	
	3300-0XB0	HCS-25-10-A24	HCS-25-01-A24	西门子无辅助触头, Honeywell为1NO或1NC触点
	3300-0XF0	HCS-25-10-A110	HCS-25-01-A110	
	3300-0XM0	HCS-25-10-A220	HCS-25-01-A220	
	3311-0XB0	HCS-25-10-A24	HCS-25-01-A24	西门子为1NO+1NC触点, Honeywell为1NO或1NC触点, 可添加HAS-11触点模块
	3311-0XF0	HCS-25-10-A110	HCS-25-01-A110	
	3311-0XM0	HCS-25-10-A220	HCS-25-01-A220	
	3400-0XB0	HCS-32-10-A24	HCS-32-01-A24	西门子无辅助触头, Honeywell为1NO或1NC触点
	3400-0XF0	HCS-32-10-A110	HCS-32-01-A110	
	3400-0XM0	HCS-32-10-A220	HCS-32-01-A220	
	3411-0XB0	HCS-32-10-A24	HCS-32-01-A24	西门子为1NO+1NC触点, Honeywell只有1NO或1NC触点, 可添加HAS-11触点模块
	3411-0XF0	HCS-32-10-A110	HCS-32-01-A110	
	3411-0XM0	HCS-32-10-A220	HCS-32-01-A220	
	3500-0XB0	HCS-40-A24		西门子无辅助触头, Honeywell为1NO或1NC触点
	3500-0XF0	HCS-40-A110		
	3500-0XM0	HCS-40-A220		
	3511-0XB0	HCS-40-A24		完全替换
3511-0XF0	HCS-40-A110			
3511-0XM0	HCS-40-A220			
4010-0XB0	HCS-09-10-A24		完全替换	
4010-0XF0	HCS-09-10-A110			
4010-0XM0	HCS-09-10-A220			
4001-0XB0		HCS-09-01-A24		
4001-0XF0		HCS-09-01-A110		

4001-0XM0		HCS-09-01-A220	
4011-0XB0	HCS-09-10-A24	HCS-09-01-A24	西门子为1NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-11触点模块
4011-0XF0	HCS-09-10-A110	HCS-09-01-A110	
4011-0XM0	HCS-09-10-A220	HCS-09-01-A220	
4022-0XB0	HCS-09-10-A24	HCS-09-01-A24	西门子为2NO+2NC触点， Honeywell为1NO或1NC触点， 可添加HAS-22触点模块
4022-0XF0	HCS-09-10-A110	HCS-09-01-A110	
4022-0XM0	HCS-09-10-A220	HCS-09-01-A220	
4020-0XB0	HCS-09-10-A24	HCS-09-01-A24	西门子为2NO触点，Honeywell 为1NO或1NC触点，可添加 HAS-20触点模块
4020-0XF0	HCS-09-10-A110	HCS-09-01-A110	
4020-0XM0	HCS-09-10-A220	HCS-09-01-A220	
4031-0XB0	HCS-09-10-A24	HCS-09-01-A24	西门子为3NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-31触点模块
4031-0XF0	HCS-09-10-A110	HCS-09-01-A110	
4031-0XM0	HCS-09-10-A220	HCS-09-01-A220	
4110-0XB0	HCS-12-10-A24		完全替换
4110-0XF0	HCS-12-10-A110		
4110-0XM0	HCS-12-10-A220		
4101-0XB0		HCS-12-01-A24	
4101-0XF0		HCS-12-01-A110	
4101-0XM0		HCS-12-01-A220	
4111-0XB0	HCS-12-10-A24	HCS-12-01-A24	西门子为1NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-11触点模块
4111-0XF0	HCS-12-10-A110	HCS-12-01-A110	
4111-0XM0	HCS-12-10-A220	HCS-12-01-A220	
4122-0XB0	HCS-12-10-A24	HCS-12-01-A24	西门子为2NO+2NC触点， Honeywell为1NO或1NC触点， 可添加HAS-22触点模块
4122-0XF0	HCS-12-10-A110	HCS-12-01-A110	
4122-0XM0	HCS-12-10-A220	HCS-12-01-A220	
4120-0XB0	HCS-12-10-A24	HCS-12-01-A24	西门子为2NO触点，Honeywell 为1NO或1NC触点，可添加 HAS-20触点模块
4120-0XF0	HCS-12-10-A110	HCS-12-01-A110	
4120-0XM0	HCS-12-10-A220	HCS-12-01-A220	
4131-0XB0	HCS-12-10-A24	HCS-12-01-A24	西门子为3NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-31触点模块
4131-0XF0	HCS-12-10-A110	HCS-12-01-A110	
4131-0XM0	HCS-12-10-A220	HCS-12-01-A220	
4210-0XB0	HCS-18-10-A24		完全替换
4210-0XF0	HCS-18-10-A110		
4210-0XM0	HCS-18-10-A220		
4211-0XB0	HCS-18-10-A24	HCS-18-01-A24	西门子为1NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-11触点模块
4211-0XF0	HCS-18-10-A110	HCS-18-01-A110	
4211-0XM0	HCS-18-10-A220	HCS-18-01-A220	
4222-0XB0	HCS-18-10-A24	HCS-18-01-A24	西门子为2NO+2NC触点， Honeywell为1NO或1NC触点， 可添加HAS-22触点模块
4222-0XF0	HCS-18-10-A110	HCS-18-01-A110	
4222-0XM0	HCS-18-10-A220	HCS-18-01-A220	
4220-0XB0	HCS-18-10-A24	HCS-18-01-A24	西门子为2NO触点，Honeywell 为1NO或1NC触点，可添加 HAS-20触点模块
4220-0XF0	HCS-18-10-A110	HCS-18-01-A110	
4220-0XM0	HCS-18-10-A220	HCS-18-01-A220	
4310-0XB0	HCS-25-10-A24		完全替换
4310-0XF0	HCS-25-10-A110		
4310-0XM0	HCS-25-10-A220		
4311-0XB0	HCS-25-10-A24	HCS-25-01-A24	西门子为1NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-11触点模块
4311-0XF0	HCS-25-10-A110	HCS-25-01-A110	
4311-0XM0	HCS-25-10-A220	HCS-25-01-A220	
4322-0XB0	HCS-25-10-A24	HCS-25-01-A24	西门子为2NO+2NC触点， Honeywell为1NO或1NC触点， 可添加HAS-22触点模块
4322-0XF0	HCS-25-10-A110	HCS-25-01-A110	
4322-0XM0	HCS-25-10-A220	HCS-25-01-A220	
4320-0XB0	HCS-25-10-A24	HCS-25-01-A24	西门子为2NO触点， Honeywell为1NO或1NC触点，
4320-0XF0	HCS-25-10-A110	HCS-25-01-A110	

4320-0XM0	HCS-25-10-A220	HCS-25-01-A220	可添加HAS-20触点模块
4411-0XB0	HCS-32-10-A24	HCS-32-01-A24	西门子为1NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-11触点模块
4411-0XF0	HCS-32-10-A110	HCS-32-01-A110	
4411-0XM0	HCS-32-10-A220	HCS-32-01-A220	
4422-0XB0	HCS-32-10-A24	HCS-32-01-A24	西门子为2NO+2NC触点， Honeywell为1NO或1NC触点， 可添加HAS-22触点模块
4422-0XF0	HCS-32-10-A110	HCS-32-01-A110	
4422-0XM0	HCS-32-10-A220	HCS-32-01-A220	
4511-0XB0	HCS-40-A24		完全替换
4511-0XF0	HCS-40-A110		
4511-0XM0	HCS-40-A220		
4522-0XB0	HCS-40-A24		西门子为2NO+2NC触点， Honeywell为1NO+1NC触点，可 添加HAS-11触点模块
4522-0XF0	HCS-40-A110		
4522-0XM0	HCS-40-A220		
4611-0XB0	HCS-50-A24		完全替换
4611-0XF0	HCS-50-A110		
4611-0XM0	HCS-50-A220		
4622-0XB0	HCS-50-A24		西门子为2NO+2NC触点， Honeywell为1NO+1NC触点，可 添加HAS-11触点模块
4622-0XF0	HCS-50-A110		
4622-0XM0	HCS-50-A220		
4644-0XB0	HCS-50-A24		西门子为4NO+4NC触点， Honeywell为1NO+1NC触点，最 多可再添加4个辅助触头
4644-0XF0	HCS-50-A110		
4644-0XM0	HCS-50-A220		
4711-0XB0	HCS-65-A24		完全替换
4711-0XF0	HCS-65-A110		
4711-0XM0	HCS-65-A220		
4722-0XB0	HCS-65-A24		西门子为2NO+2NC触点， Honeywell为1NO+1NC触点，可 添加HAS-11触点模块
4722-0XF0	HCS-65-A110		
4722-0XM0	HCS-65-A220		
4744-0XB0	HCS-65-A24		西门子为4NO+4NC触点， Honeywell为1NO+1NC触点，最 多可再添加4个辅助触头
4744-0XF0	HCS-65-A110		
4744-0XM0	HCS-65-A220		
4811-0XB0	HCS-80-A24		完全替换
4811-0XF0	HCS-80-A110		
4811-0XM0	HCS-80-A220		
4822-0XB0	HCS-80-A24		西门子为2NO+2NC触点， Honeywell为1NO+1NC触点，可 添加HAS-11触点模块
4822-0XF0	HCS-80-A110		
4822-0XM0	HCS-80-A220		
4844-0XB0	HCS-80-A24		西门子为4NO+4NC触点， Honeywell为1NO+1NC触点，最 多可再添加4个辅助触头
4844-0XF0	HCS-80-A110		
4844-0XM0	HCS-80-A220		
4911-0XB0	HCS-95-A24		完全替换
4911-0XF0	HCS-95-A110		
4911-0XM0	HCS-95-A220		
4922-0XB0	HCS-95-A24		西门子为2NO+2NC触点， Honeywell为1NO+1NC触点，可 添加HAS-11触点模块
4922-0XF0	HCS-95-A110		
4922-0XM0	HCS-95-A220		
4944-0XB0	HCS-95-A24		西门子为4NO+4NC触点， Honeywell为1NO+1NC触点，最 多可再添加4个辅助触头
4944-0XF0	HCS-95-A110		
4944-0XM0	HCS-95-A220		

西门子		Honeywell		备注		
		1NO	1NC			
3RT	6015- 或2015-	1AB01	HCS-09-10-A24		完全替代	
		1AB02		HCS-09-01-A24		
		1AF01	HCS-09-10-A110			
		1AF02		HCS-09-01-A110		
		1AN21	HCS-09-10-A220			
		1AN22		HCS-09-01-A220		
	6016- 或2016-	1AB01	HCS-09-10-A24			
		1AB02		HCS-09-01-A24		
		1AF01	HCS-09-10-A110			
		1AF02		HCS-09-01-A110		
		1AN21	HCS-09-10-A220			
		1AN22		HCS-09-01-A220		
	6017- 或2017-	1AB01	HCS-12-10-A24			
		1AB02		HCS-12-01-A24		
		1AF01	HCS-12-10-A110			
		1AF02		HCS-12-01-A110		
		1AN21	HCS-12-10-A220			
		1AN22		HCS-12-01-A220		
	6018- 或2018-	1AB01	HCS-18-10-A24			
		1AB02		HCS-18-01-A24		
		1AF01	HCS-18-10-A110			
		1AF02		HCS-18-01-A110		
		1AN21	HCS-18-10-A220			
		1AN22		HCS-18-01-A220		
	6023- 或2023-	1AC20	HCS-09-10-A24	HCS-09-01-A24		西门子为1NO+1NC触点， Honeywell为1NO或1NC触点， 可添加HAS-11触点模块
		1AG20	HCS-09-10-A110	HCS-09-01-A110		
		1AN20	HCS-09-10-A220	HCS-09-01-A220		
	6024- 或2024-	1AC20	HCS-12-10-A24	HCS-12-01-A24		
		1AG20	HCS-12-10-A110	HCS-12-01-A110		
		1AN20	HCS-12-10-A220	HCS-12-01-A220		
6025- 或2025-	1AC20	HCS-18-10-A24	HCS-18-01-A24			
	1AG20	HCS-18-10-A110	HCS-18-01-A110			
	1AN20	HCS-18-10-A220	HCS-18-01-A220			
6026- 或2026-	1AC20	HCS-25-10-A24	HCS-25-01-A24			
	1AG20	HCS-25-10-A110	HCS-25-01-A110			
	1AN20	HCS-25-10-A220	HCS-25-01-A220			
6027- 或2027-	1AC20	HCS-32-10-A24	HCS-32-01-A24			
	1AG20	HCS-32-10-A110	HCS-32-01-A110			
	1AN20	HCS-32-10-A220	HCS-32-01-A220			
6028- 或2028-	1AC20	HCS-40-A24		完全替代		
	1AG20	HCS-40-A110				
	1AN20	HCS-40-A220				
5034-	1AC20	HCS-32-10-A24	HCS-32-01-A24			
	1AG20	HCS-32-10-A110	HCS-32-01-A110			
	1AN20	HCS-32-10-A220	HCS-32-01-A220			
5035-	1AC20	HCS-40-A24				
	1AG20	HCS-40-A110				

	1AN20	HCS-40-A220		西门子不自带任何辅助触头， 一定会外挂不同的辅助触头模 块
5036-	1AC20	HCS-50-A24		
	1AG20	HCS-50-A110		
	1AN20	HCS-50-A220		
5044-	1AC20	HCS-65-A24		
	1AG20	HCS-65-A110		
	1AN20	HCS-65-A220		
5045-	1AC20	HCS-80-A24		
	1AG20	HCS-80-A110		
	1AN20	HCS-80-A220		
5046-	1AC20	HCS-95-A24		
	1AG20	HCS-95-A110		
	1AN20	HCS-95-A220		